



1. Install TSE VCT™ chamber onto the appropriate bracket holes, corresponding with the length of installed slack adjuster.
2. Ensure the chamber is pneumatically (min. 80 psi) or mechanically caged (as shown).
3. Loosen the clamp nut until the clamp band can be rotated.